


MFG: CHRISTIANI  
RIDE: MOON Buggies  
Kiddy

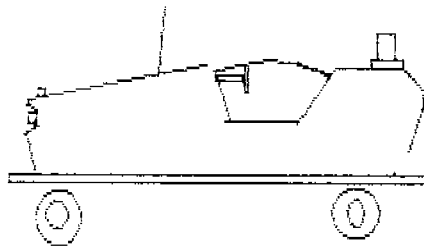

MOON BUGGY

Trailer mounted kiddy turnpike

SETUP AND MAINTENANCE

DIMENSIONS 44 X 29

VOLTAGE 220 SINGLE PHASE

AMPS 40

2 passengers per car

CARNY TOWN.COM

## SETUP

1. Level back of trailer.
2. Level front of trailer
3. Level front to back
4. Set blocks for side wall
5. Let down sides
6. Level sides (first, third, fifth, fourth and second ) from  
either end
7. Put belly cloth on
8. Set steps
9. Set back scenery brackets starting at front of trailer  
with # 1
10. Set back scenery
11. Put track jumpers in
12. Set fence and hand rails
13. Set up running lights
14. Set up stars and ball
15. Take out car stops

## OPERATION

One or two operators ,one operator on primary controls at all times. Primary controls ,control all operations of ride

1. Loading and send off

2. Middle track

3. Exit track

4. Main track switch (shuts down inverter )

Secondary operator controls only exit track .

(secondary operator only needed when buisy)

Primary operator seats passengers and puts rope seatbelt on

Scondary operator helps passengers out

MAINTENANCE

DAILY

Sweep platforms to keep foreign matter off track

Check track jumpers

Check and clean drag

Check rope seat belts and latches

Clean seats

Check windows

Check crane cables for wear

WEEKLY

Check wheels

Check and lube drive chains

MONTHLY

Lube axles

MOON BUGGY

Trailer mounted kiddy turnpike

SETUP AND MAINTENANCE

DIMENSIONS 44 X 28

VOLTAGE 220 SINGLE PHASE

AMPS 40

2 passengers per car

SETUP AND MAINTENANCE

## SETUP

1. Level back of trailer.
2. Level front of trailer
3. Level front to back
4. Set blocks for side wall
5. Let down sides
6. Level sides (first, third, fifth ,fourth and second ) from  
either end
7. Put belley cloth on
8. Set steps
9. Set back scenery brackets starting at front of trailer  
with # 1
10. Set back scenery
11. Put track jumpers in
12. Set fence and hand rails
13. Set up running lights
14. Set up stars and ball
15. Take out car stops

## OPERATION

One or two operators ,one operator on primary controls  
at all times.

Primary controls ,control all operations of ride .

1. Loading and send off
2. Middle track
3. Exit track
4. Main track switch (shuts down inventor )

Secondary operator controls only exit track .

(secondary operator only needed when buisy)

Primary operator seats passengers and puts rope  
seatbelt on

Scoundary operator helps passengers out

MAINTENANCE

DAILY

Sweep platforms to keep foreign matter off track

Check track jumpers

Check and clean drags

Check rope seat belts and latches

Clean seats

Check windshields

Check drag cables for wear

WEEKLY

Check v-belts

Check and lube drive chains

MONTHLY

Lube axles

MOON BUGGY

44

36

CARNYTOWN.COM